


Mounting to a pole...



The mounting kit is not intended to support the weight of cables and instruments. Use additional hardware to suspend instrumentation.

Mounting to a wall...

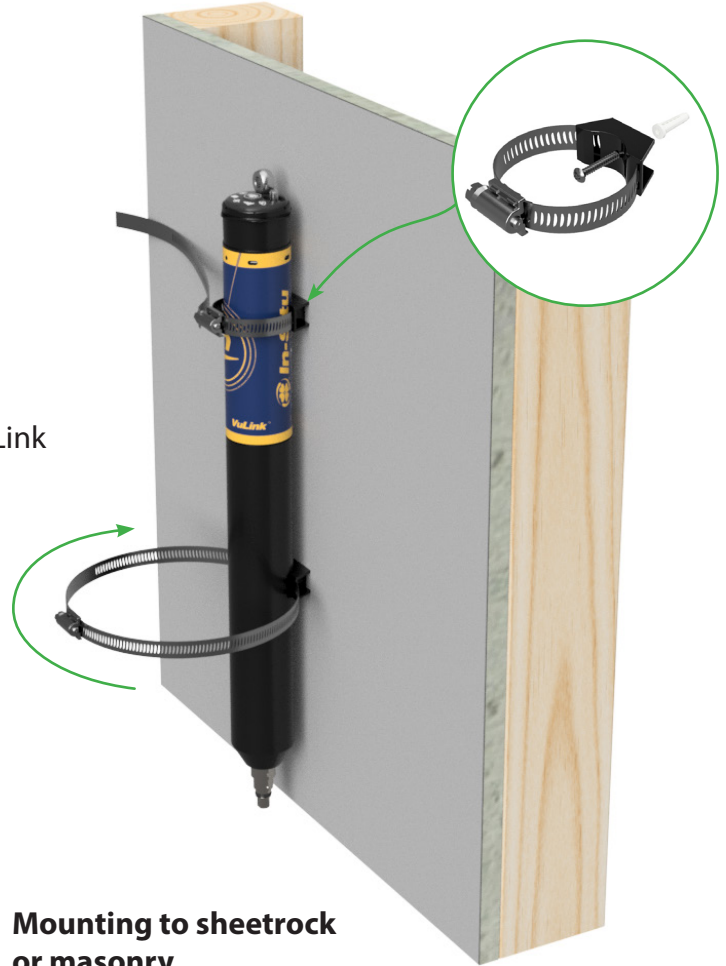

Mounting to sheetrock or masonry...

- 1 Drill a 1/4" pilot hole for each black mounting bracket.
- 2 Insert the plastic drywall anchors into the pilot holes. Tap the anchors lightly with a hammer until they are fully inserted.
- 3 Place a screw in each bracket. Drive the screws into the anchors until snug.
- 4 Tighten the clamps to secure VuLink.

Mounting to plywood or wood...

- 1 Drill a 9/64" pilot hole for each black mounting bracket.
- 2 Place a screw in each bracket. Drive the screws into the wall to secure the brackets.
- 3 Tighten the clamps.